



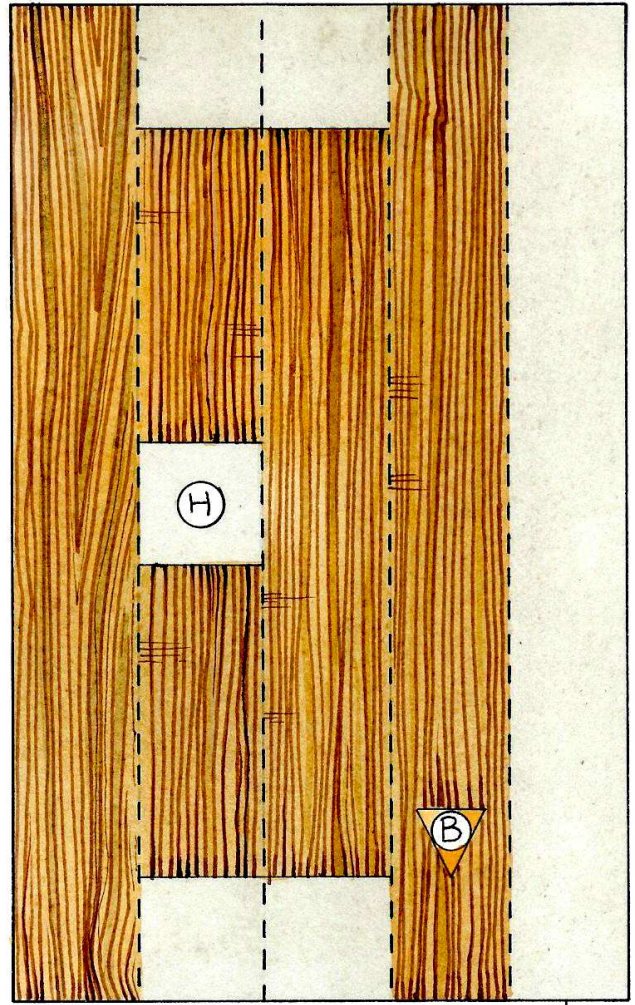

2



3


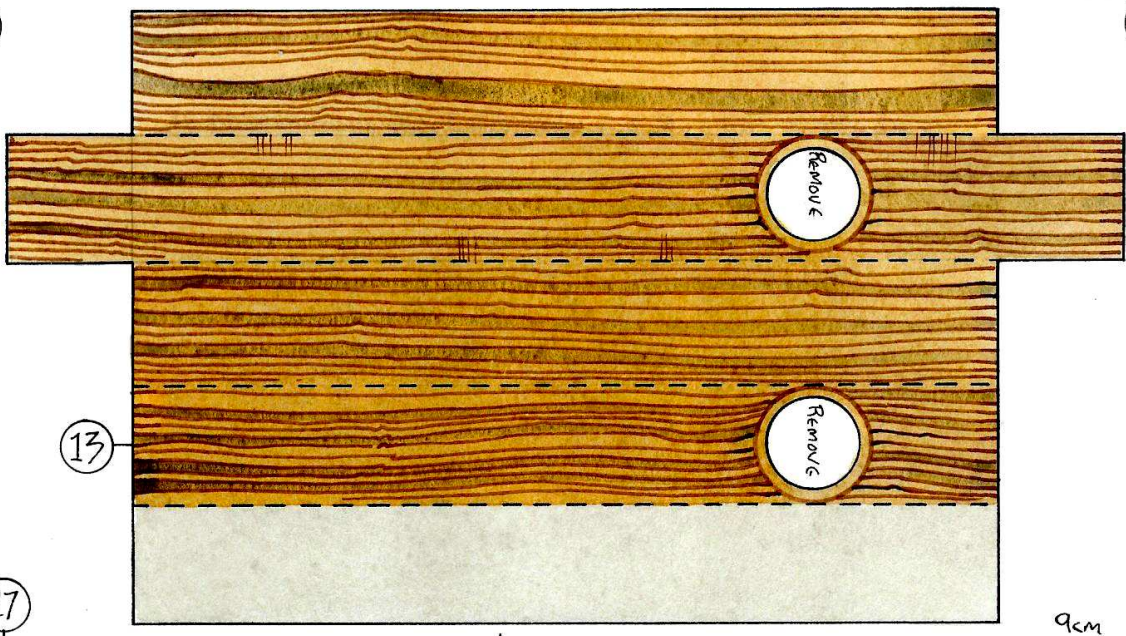


13


9cm

9cm





27

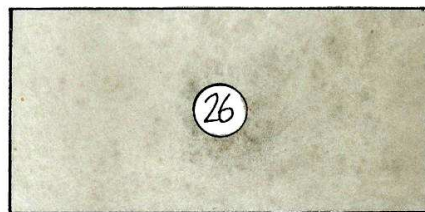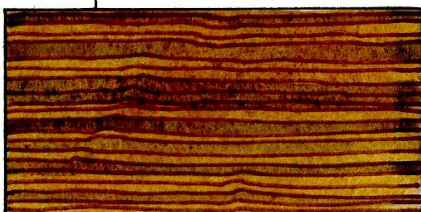



26


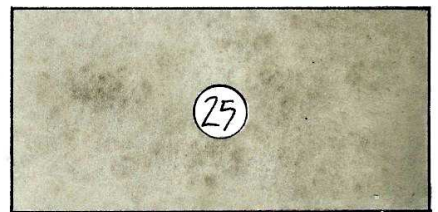



25

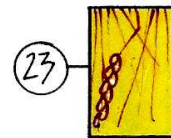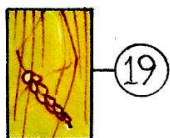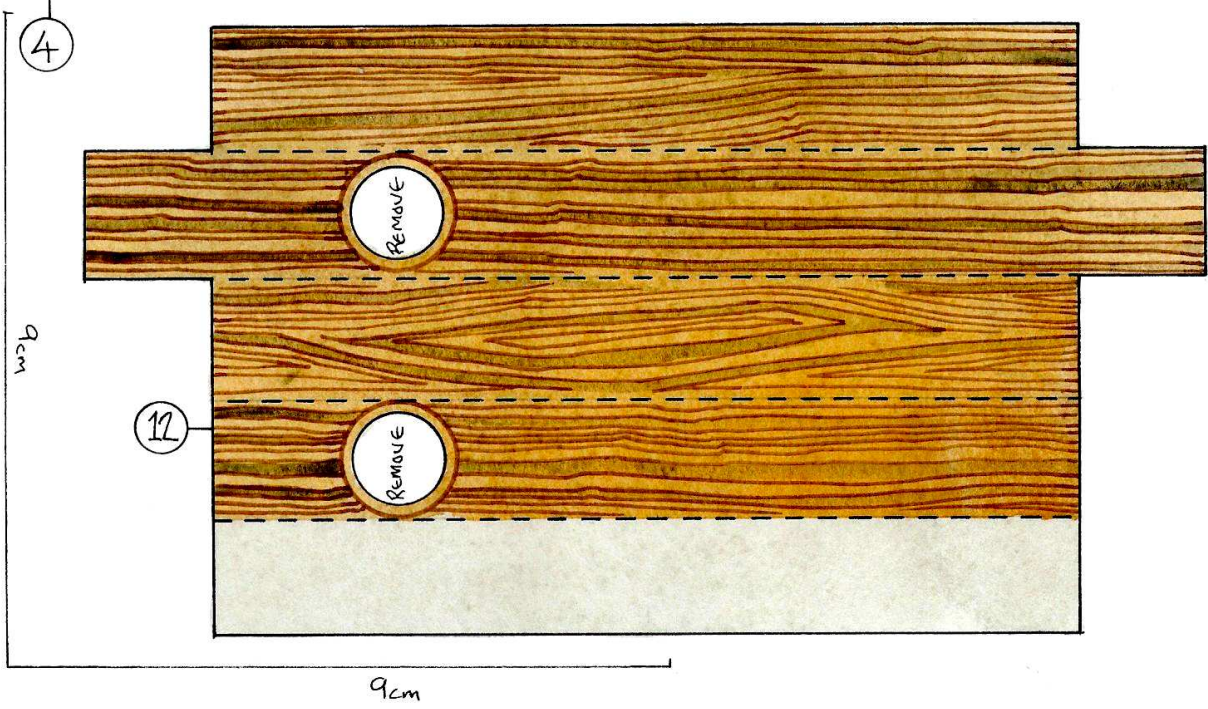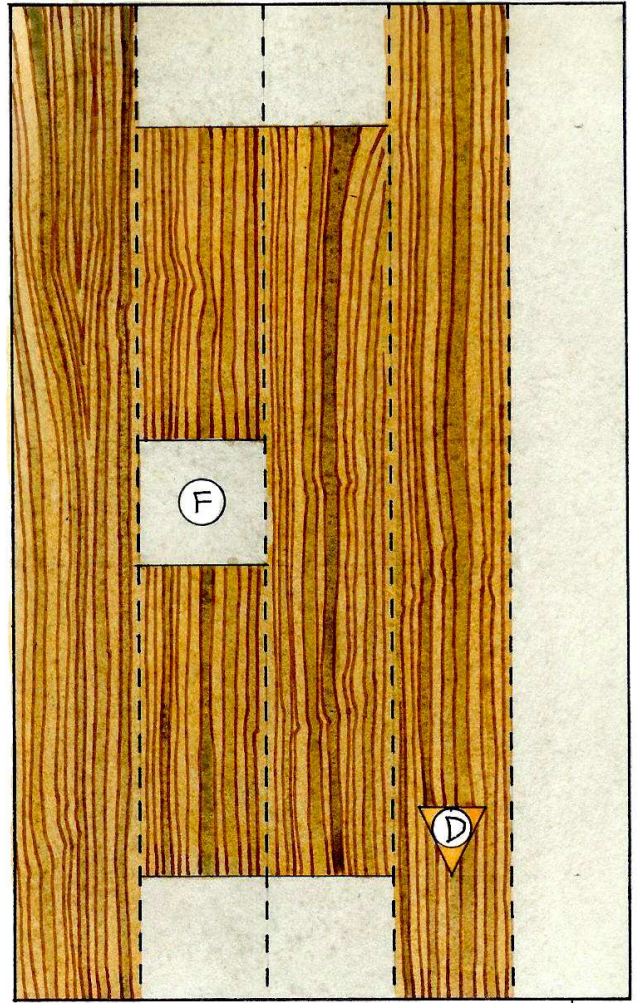


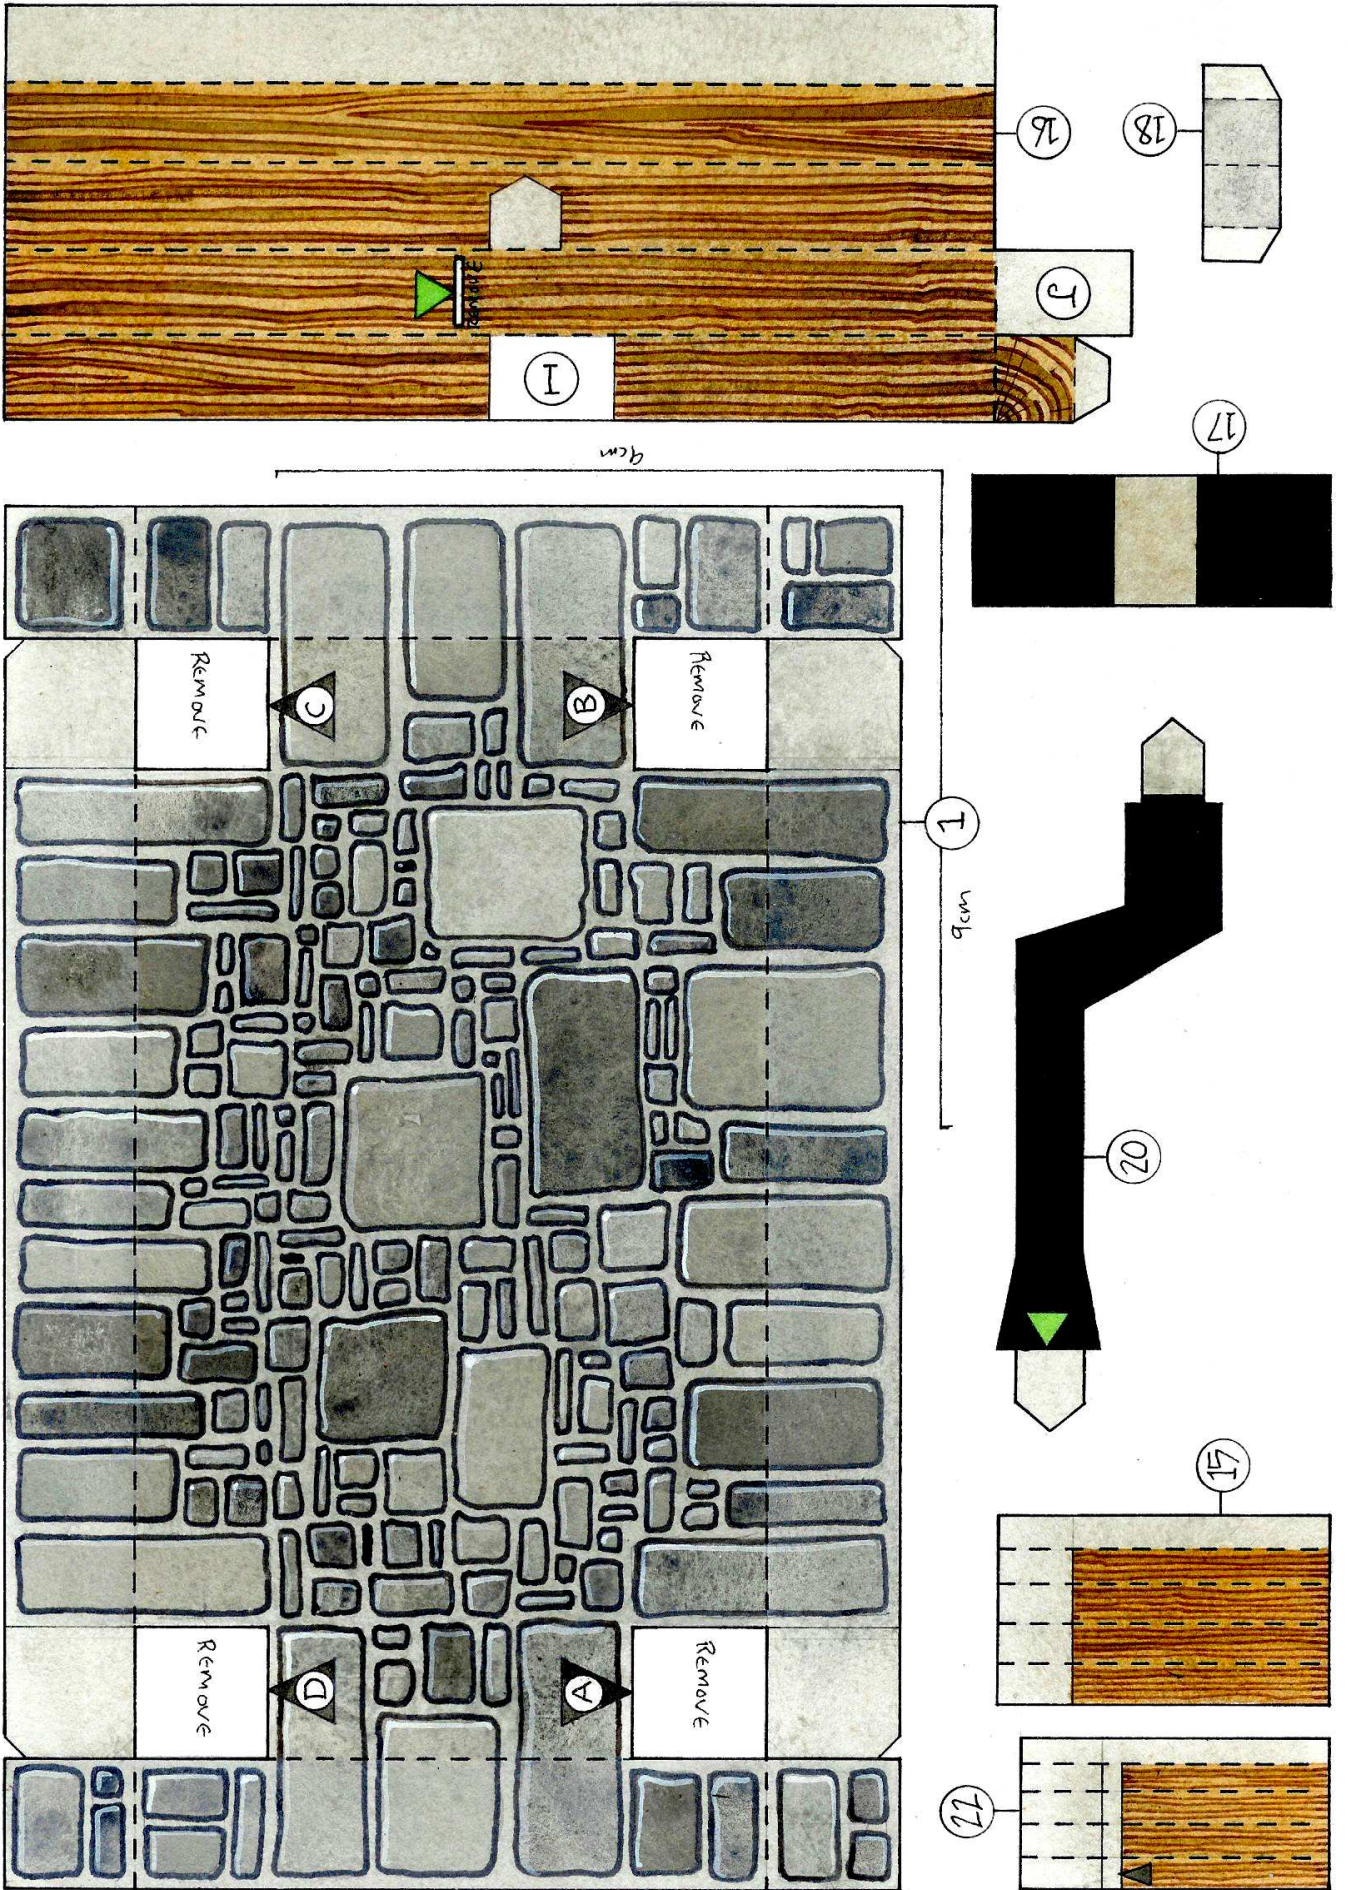


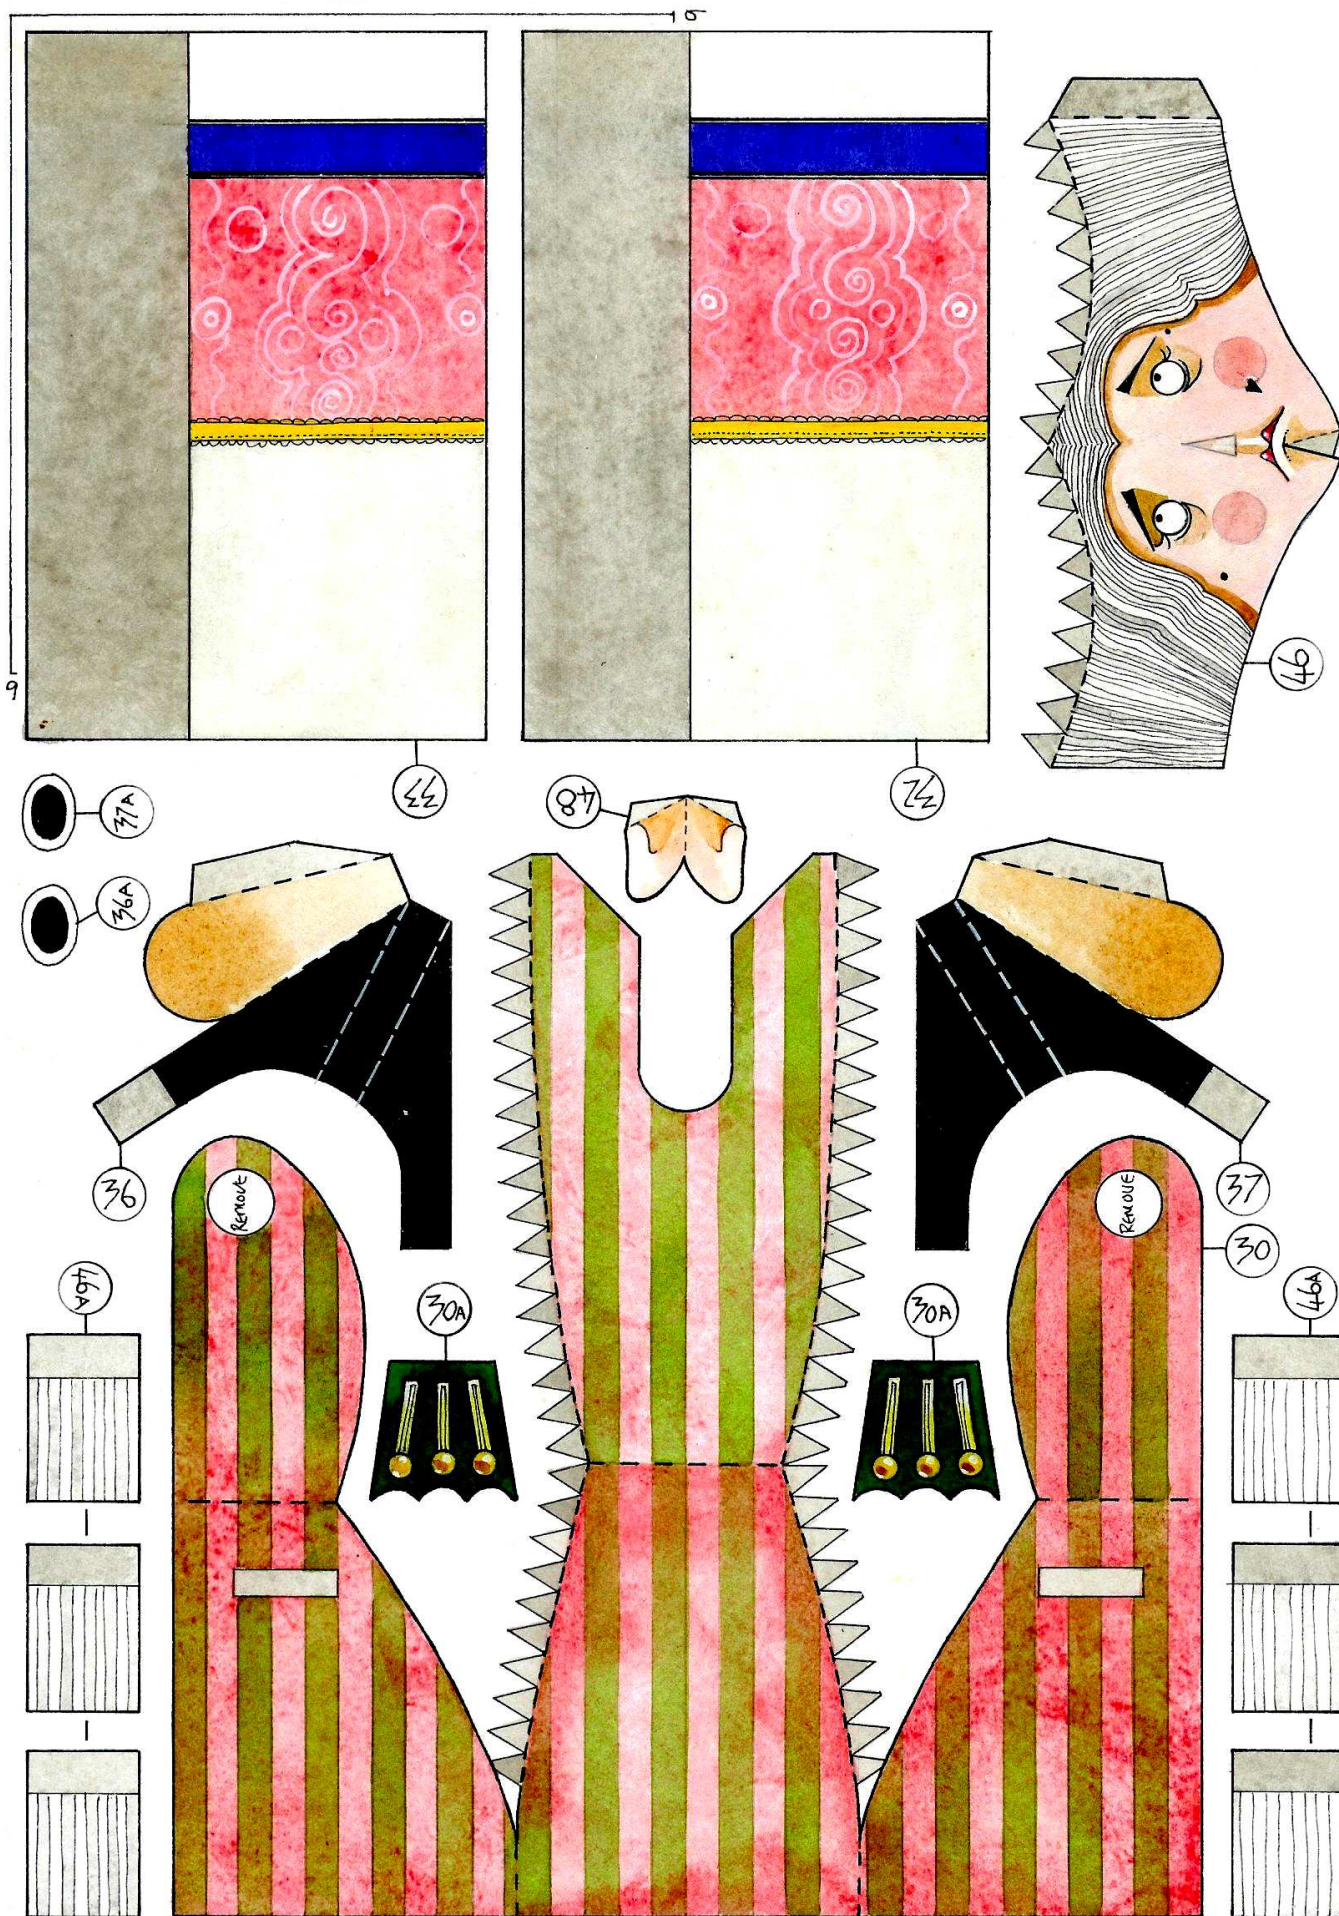

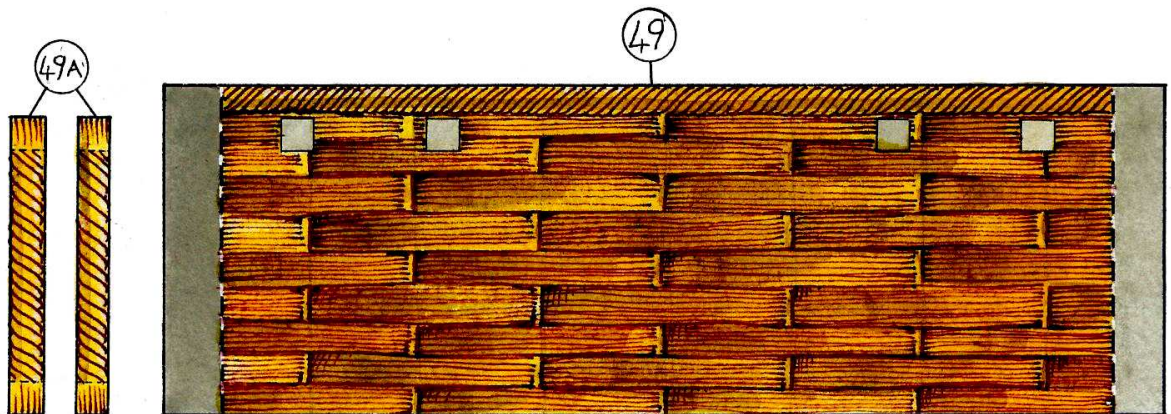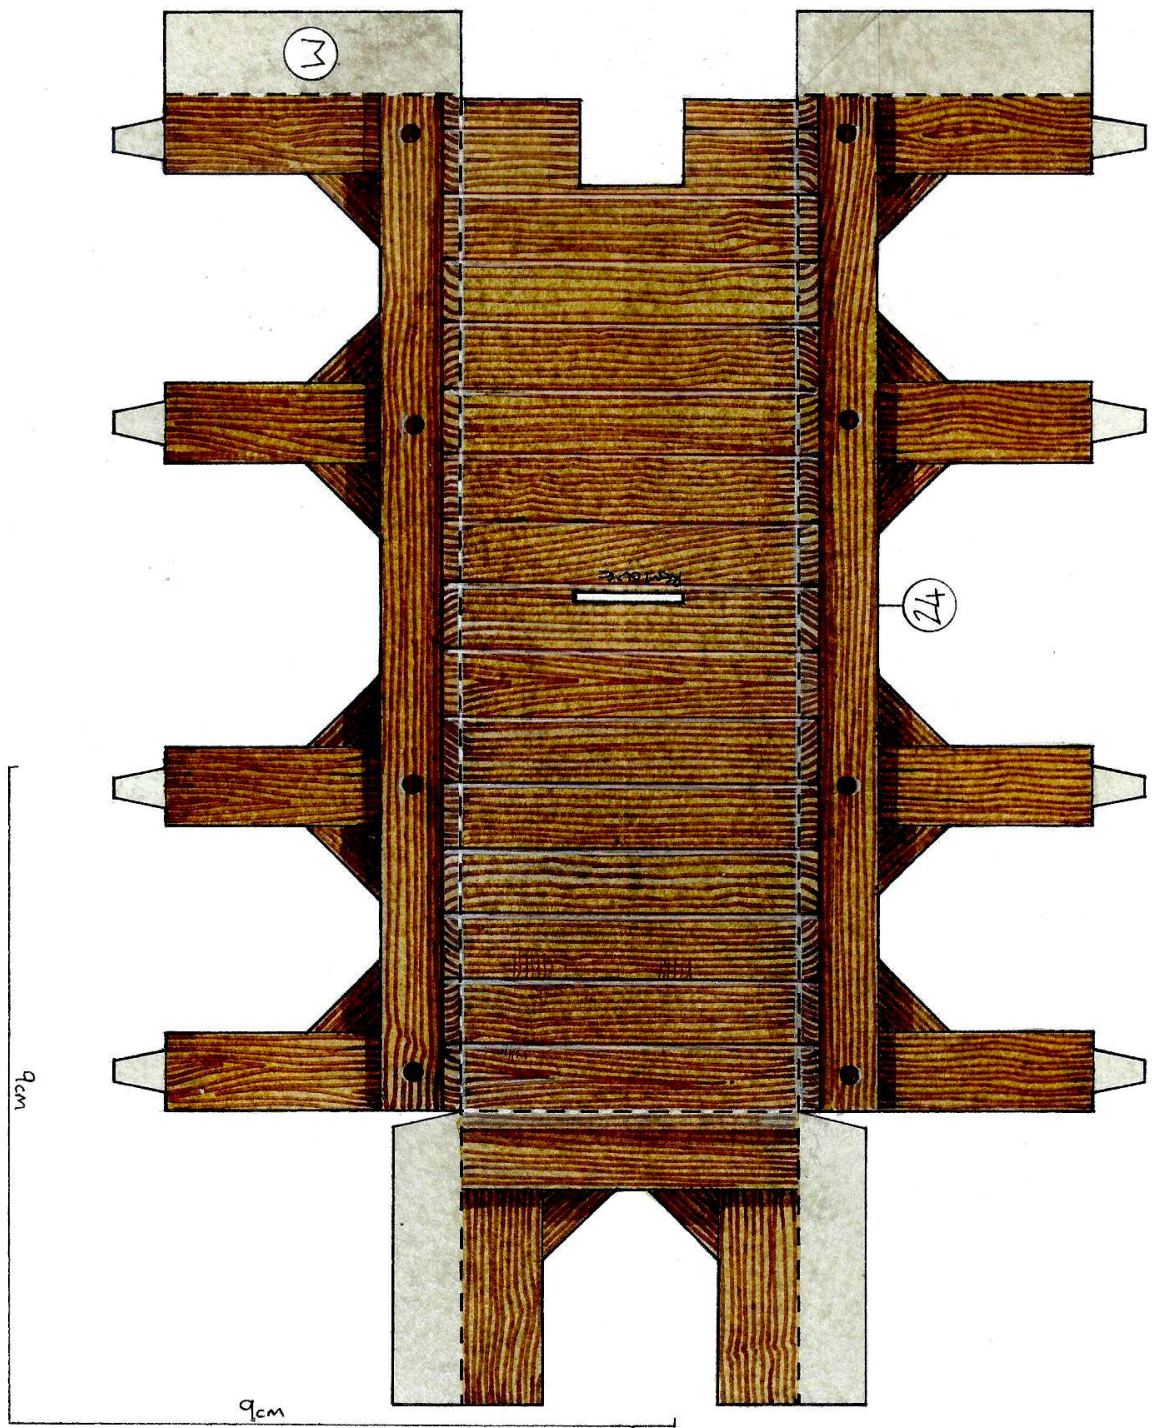

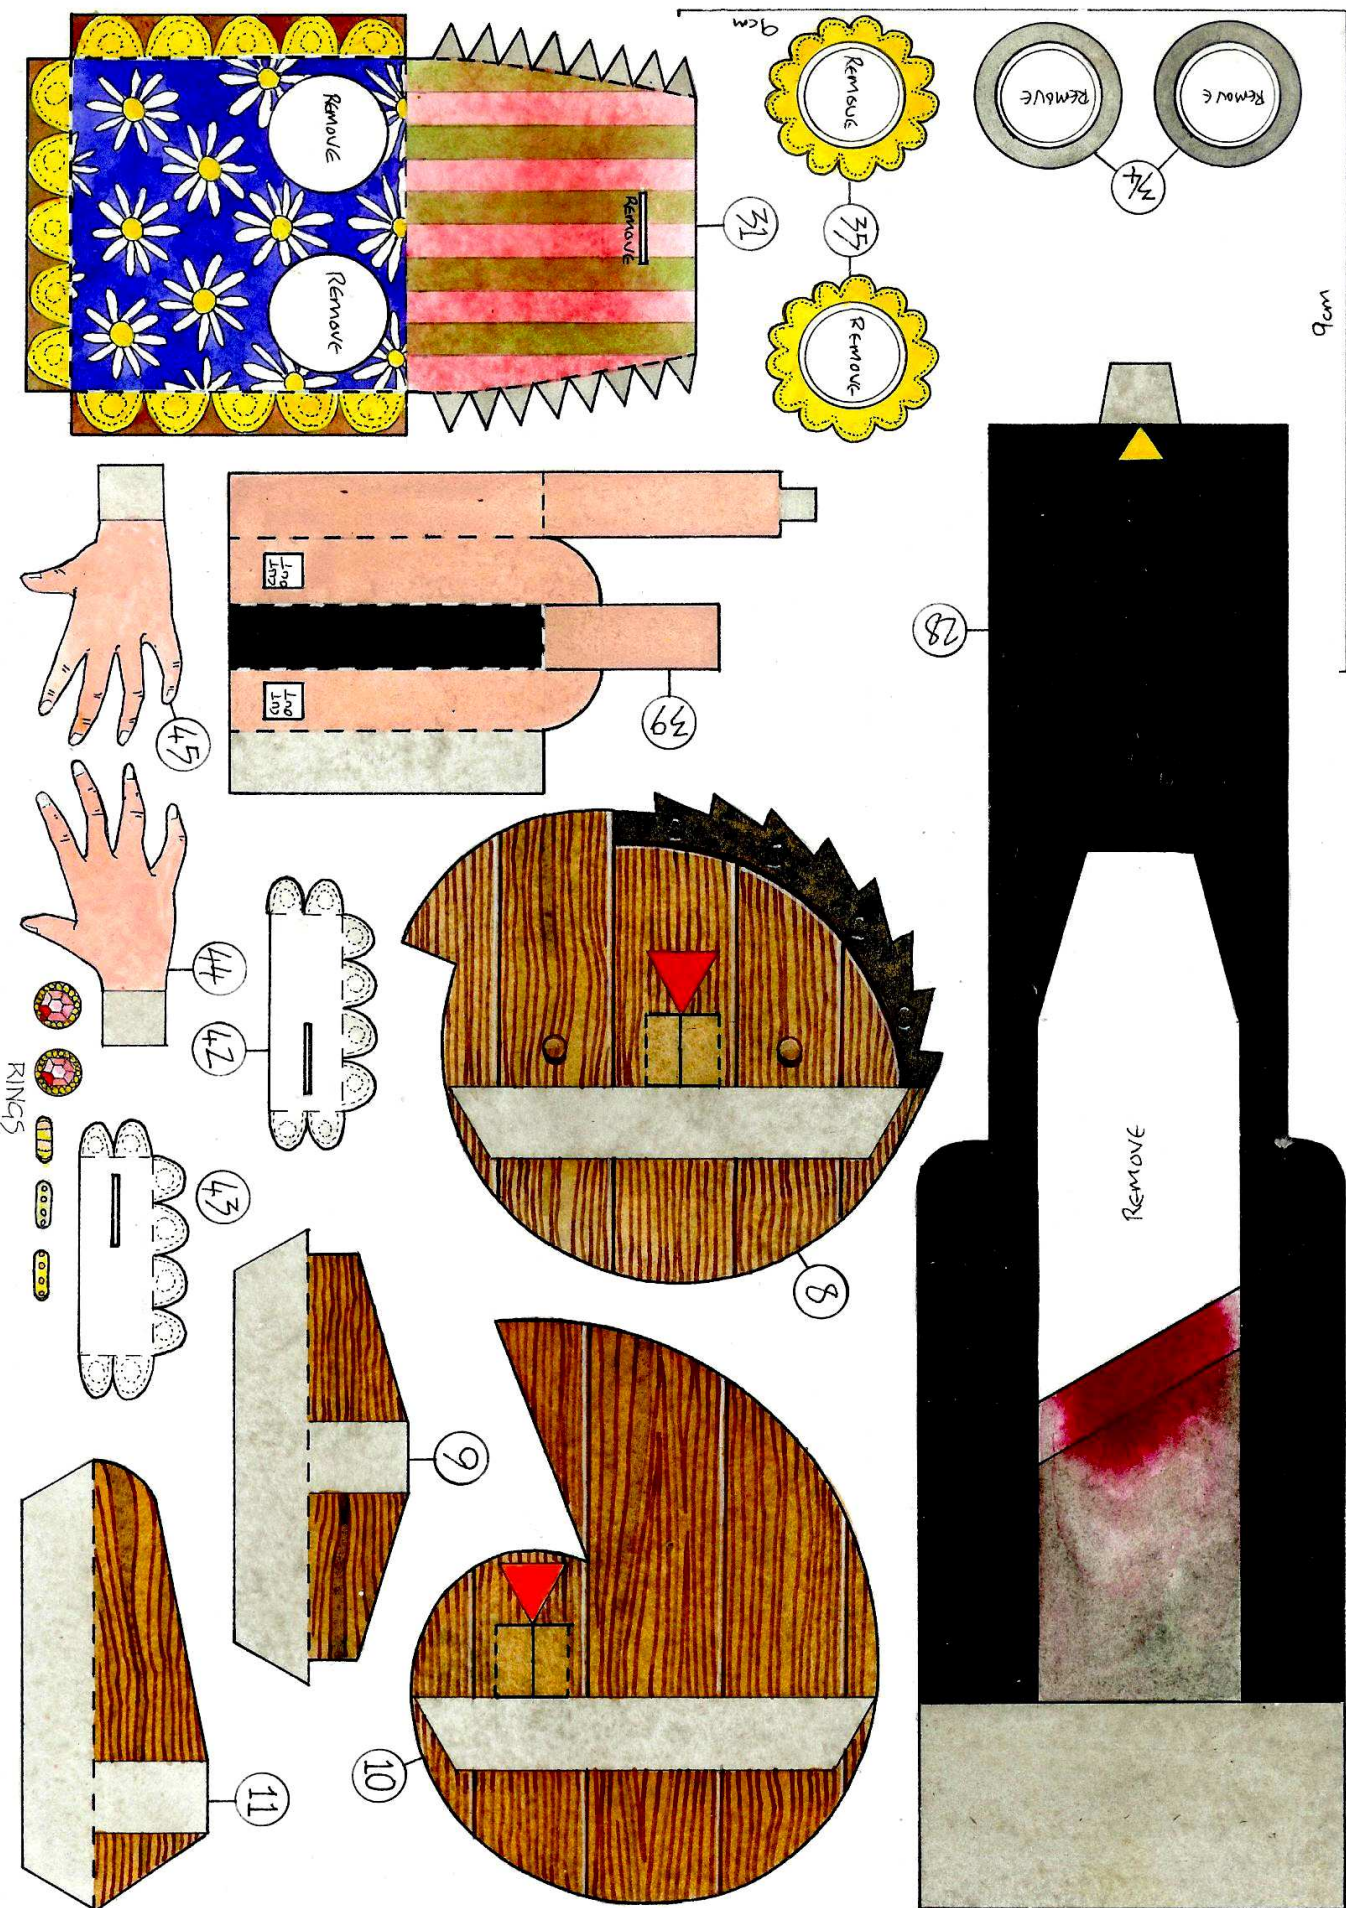

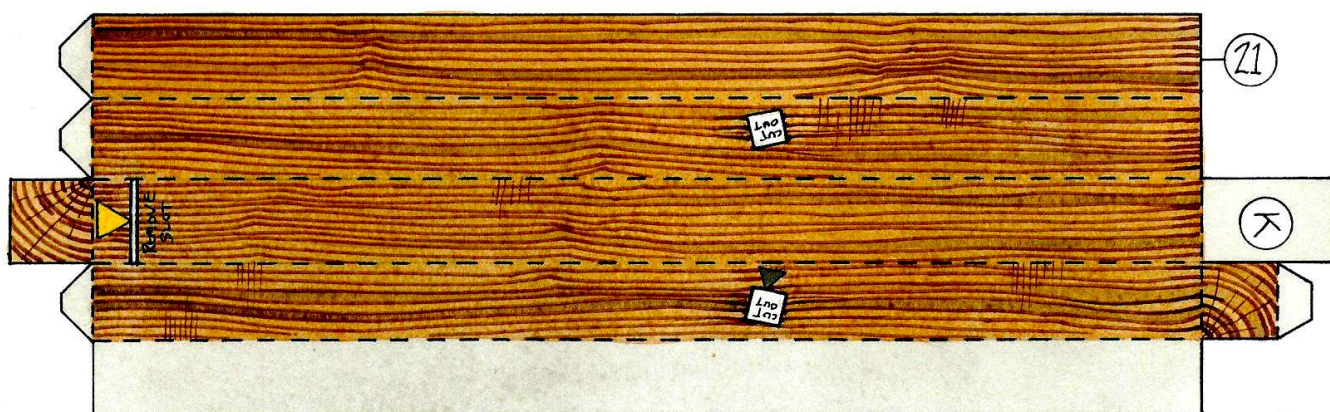

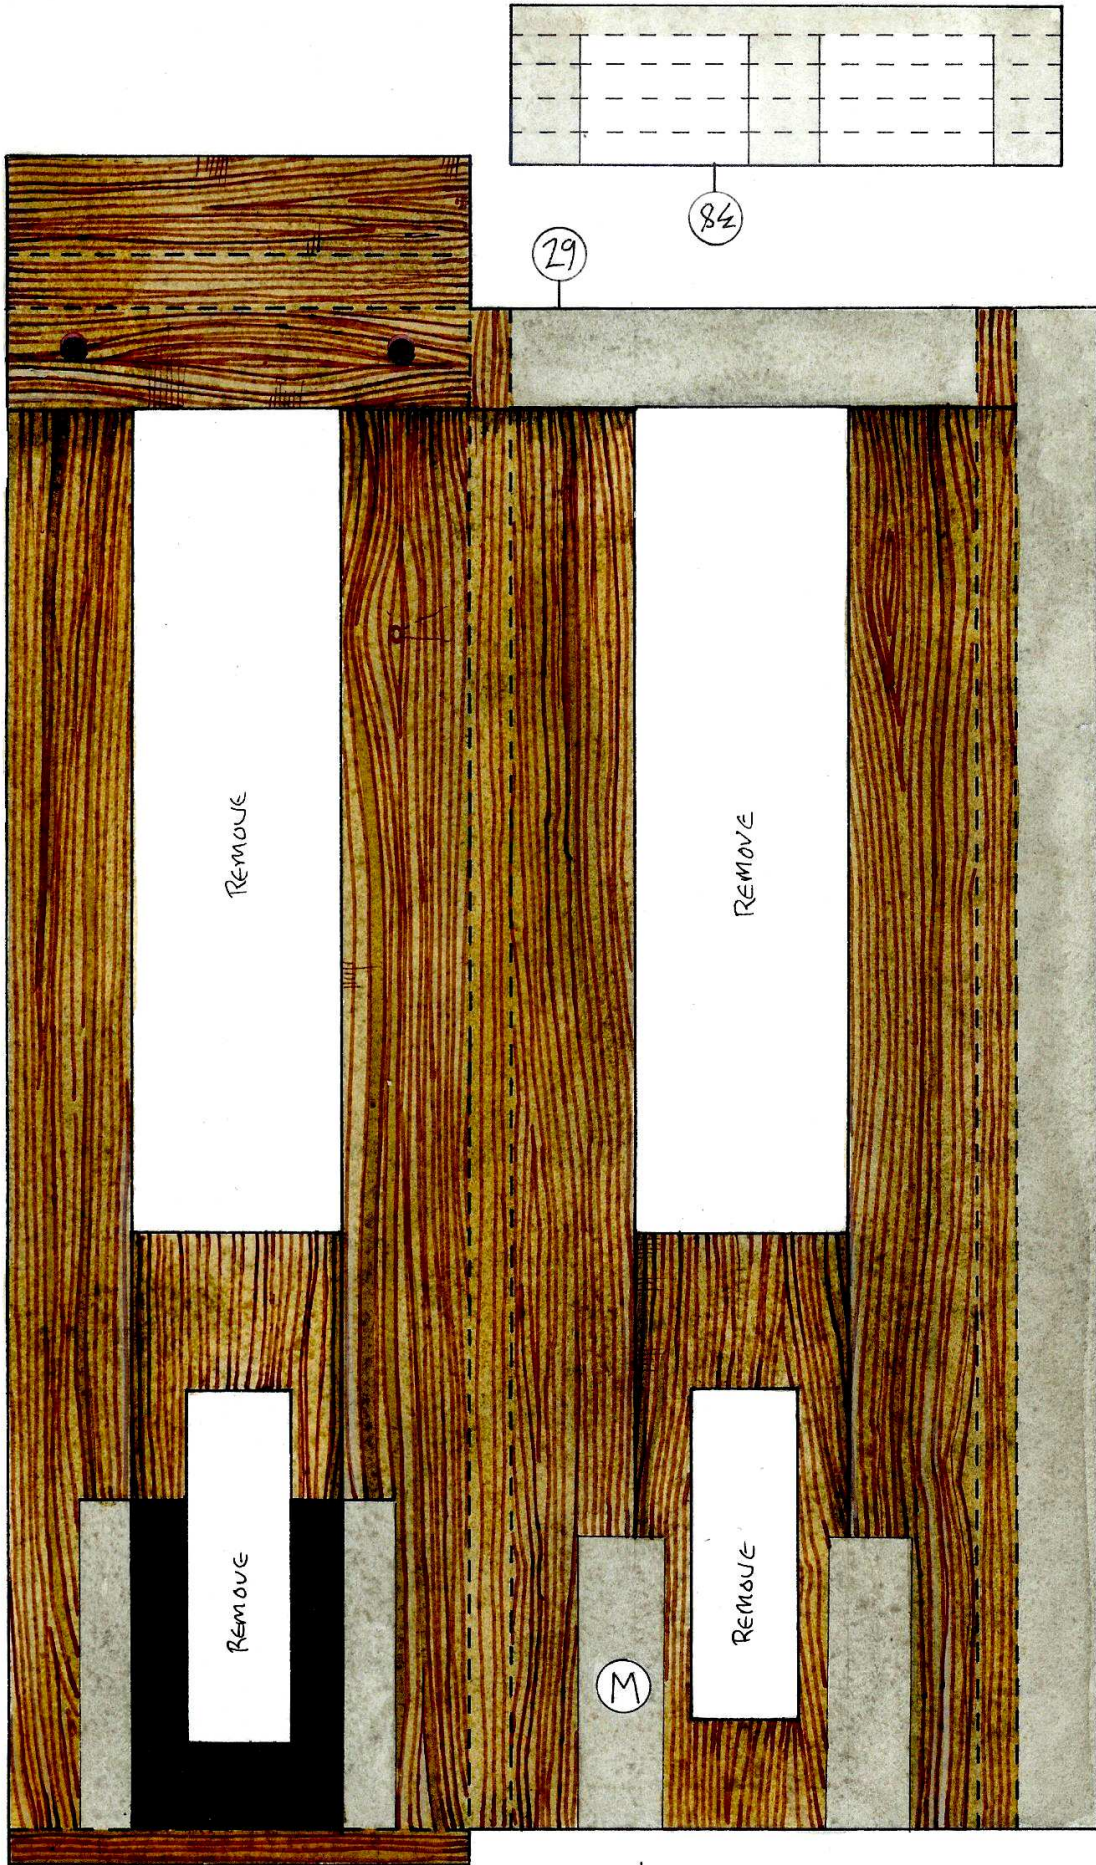

9mm

9mm

INSTRUCTIONS

ALL OF THE PIECES ARE NUMBERED IN ORDER. USE A SHARP CRAFT KNIFE TO CUT THEM OUT AS YOU NEED THEM. DON'T FORGET TO CUT OUT ALL OF THE SLOTS ———.

SCORE ALL DOTTED LINES WITH A BLUNT KNIFE PRESSING DOWN HARD. PRE-BEND ALL PARTS BEFORE GLUEING.

USE WHITE PVA WOODWORKING GLUE

